




CAUTION


All products must be handled, installed and maintained with due care only by trained professionals, using adequate tools and adopting all safety measures as provided for in this Instructions or by local applicable regulations. Ebrille's products are constructed using state-of-the-art technology in accordance with recognized safety regulations. Nevertheless, there is still a risk of injury or death to the user or others or of damage to the product and other property in the event of improper use or use for which the product is not intended for.

Instructions for handling and soldering of EBRILSPLIT LINESETS


1

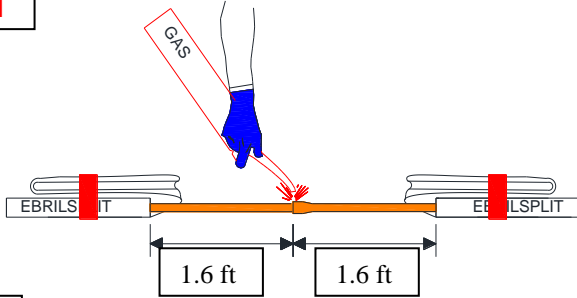

2

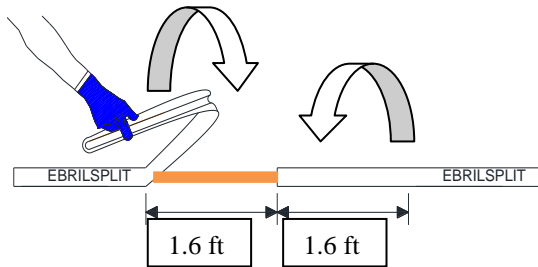

3

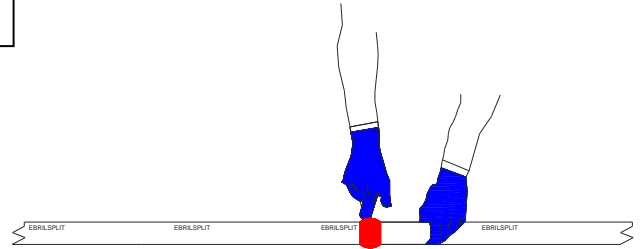

STEPS:

Picture 1 - remove insulating layer for 50 cm (1,6 ft) from both pipe-ends.


Picture 1 - preparation of pipe-ends for soldering.

Picture 1 - soldering


Pictures 2 – 3 repositioning of the insulating layer after soldering. Wait at least 30 minutes after the soldered area has cooled-down before repositioning the insulating layer.

Instructions for bending EBRILSPLIT LINESETS

1

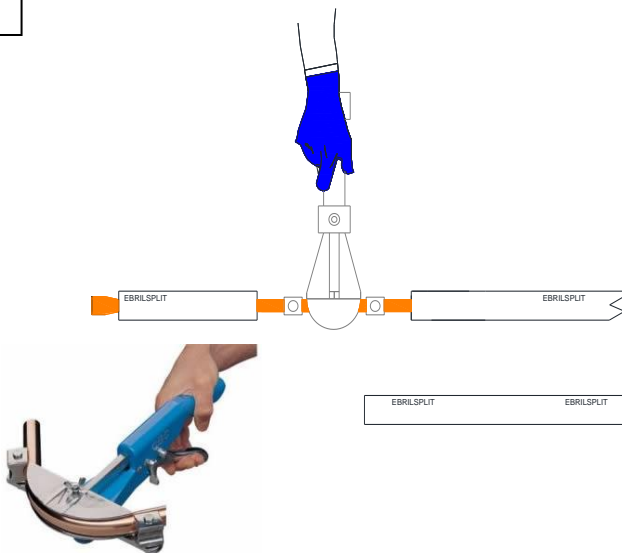

2

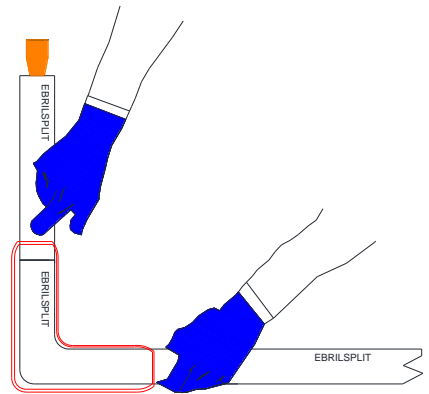

The kit repair or EPDM jacket must be applied in the red-marked area.





CAUTION

All products must be handled, installed and maintained with due care only by trained professionals, using adequate tools and adopting all safety measures as provided for in this Instructions or by local applicable regulations. Ebrille's products are constructed using state-of-the-art technology in accordance with recognized safety regulations. Nevertheless, there is still a risk of injury or death to the user or others or of damage to the product and other property in the event of improper use or use for which the product is not intended for.

Correct installation of EBRILSPLIT LINESETS : External installations

1

Examples of external installations

2

we recommend to follow the installation instruction of the equipment manufacturer

Wrap the connections with a self bonding such as Scotch 23 making sure that ends of the line set are also closed with the tape

WARNING! PREVENT INFILTRATION OF WATER BETWEEN THE INSULATION AND THE COPPER PIPE

Correct installation of EBRILSPLIT LINESETS: internal installations

1

Internal Installation: the copper pipes are protected by the insulating sheath

Perform the installation as with the external pipes. Cover the junction with the sheath as provided using a duct tape

2